



4F-1, 236, Fu-Te 2<sup>nd</sup> Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097

# X-motor Changing Process

## RX/RXII

Revision History :

Version	Date	Page	CONTENTS
1.0	May 24, 2014		First release
2.0	Sept. 16, 2015		Add RX II


Tools Required:

- Phillips screwdriver


1. Use Phillips screwdriver to loose screws on Rear platen extension.



2. Use Phillips screwdriver to loose screws on left side cover

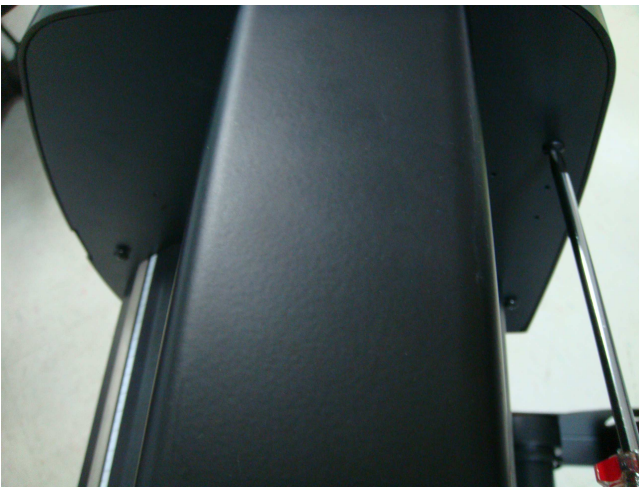


3. Un-plug 2 cable from X motor connectors on the terminal PCB.

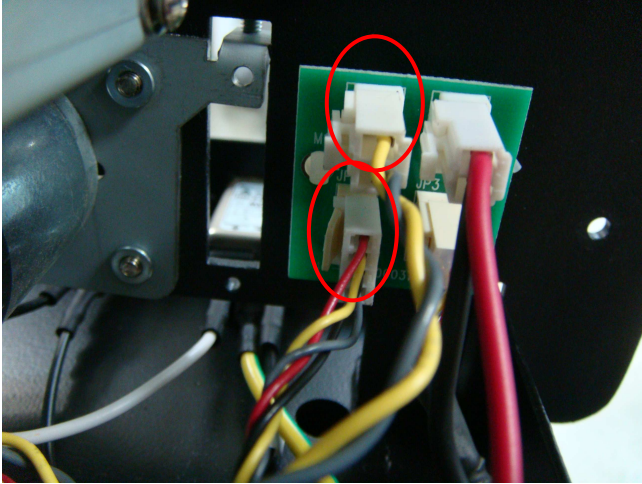

4. Use Phillips screwdriver to remove four screws.

NOTE: Do not remove one by one. Loose and remove the screws synchronously

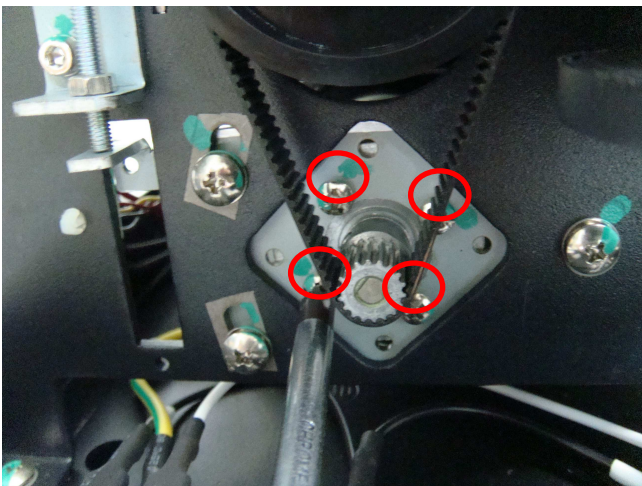

5. Change X motor.

